

## WIRELESS 2- OR 4-WAY PUSHBUTTON WITHOUT BATTERY OR WIRE, WITHOUT FRAME FT4CH-



Wireless pushbutton with intermediate frame and rocker (without frame)



Wireless pushbutton with intermediate frame and double rocker (without frame)



Manuals and documents in further languages:  
<https://eltako.com/redirect/FT4CH->

## FT4CH-



Wireless 2- or 4-way pushbutton for internal frame dimensions 60 x 60 mm, 15 mm high, Feller Swiss. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. With rocker and double rocker. Also for cover frames from ABB Normelec and Hager.

<b>FT4CH-hg</b>	Wireless 2- or 4-way pushbutton without battery or wire, without frame, light grey	<b>Art. No. 30000223</b>	<b>62,00 €/pc.</b>
<b>FT4CH-sz</b>	Wireless 2- or 4-way pushbutton without battery or wire, without frame, black	<b>Art. No. 30000224</b>	<b>62,00 €/pc.</b>
<b>FT4CH-w</b>	Wireless 2- or 4-way pushbutton without battery or wire, without frame, white	<b>Art. No. 30000222</b>	<b>62,00 €/pc.</b>